

INCLINATION REGISTER SYSTEM IR-10



To determine and register the inclination angle degrees (XY axis) of the samples (boxes, packing and packaging) subjected to compressive strength test (BCT)




The inclinometer fits easily on the mobile (oscillating) compression plate

INCLINATION REGISTER SYSTEM IR-10

The system (hardware y Software) can be adapted to all compression testing machines.

The inclinometer allows the recording of the angle of inclination in the X and Y axes during the compression test.

** This accessory can only be installed with the OSCILLATING Plate System

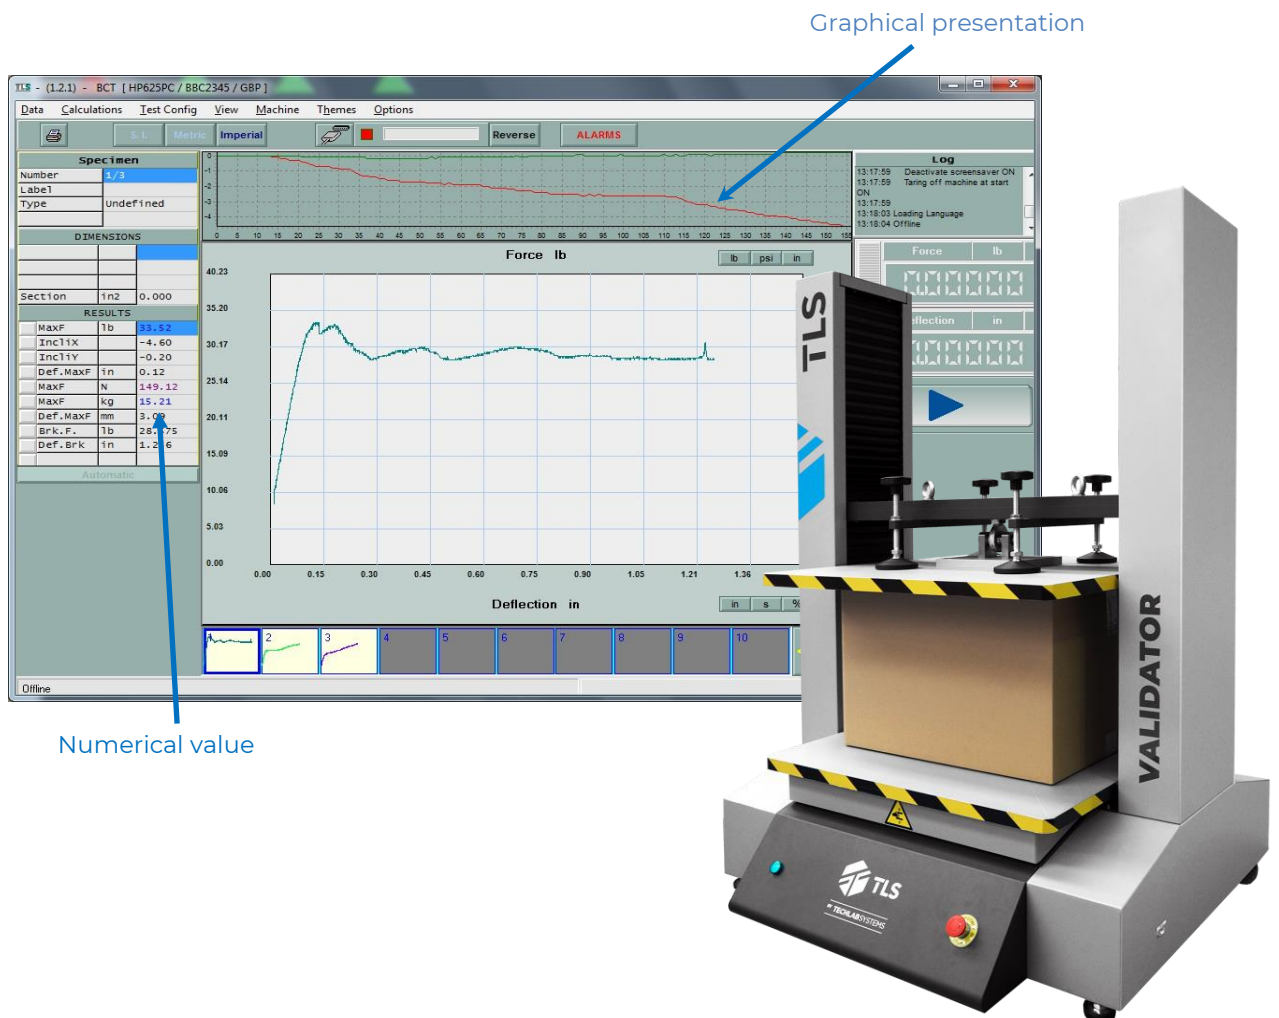

The presentation in the Compression Testing menu is very clear:

- 1/ **Numerical** presentation of inclination angles in X/Y axis, **resolution +/- 0.1 degrees** of inclination
- 2/ **Graphical** presentation of the evolution of the degrees of inclination during BCT Test

STANDARD DELIVERY CONTENT:

- * Electronic inclinometer IR-10 + Measurement software and recording of inclination degrees